


Easy Fence Installation Instructions

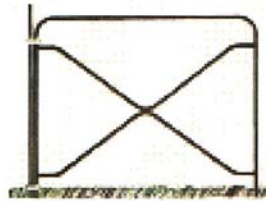

1. Drive post #1. Post should be 7 feet in length or longer.


2. Clamp Large Brace Panel to the post as shown.



3. Move panel slightly out of line. Drive post #2. As post is driven, (as shown) in order for post hole driver to clear the brace panel.


Note: Be sure the post is tight against the brace panel.

4. After driving #2, hold it tightly against the top of Large Brace Panel. At the same time, secure with a clamp both Large and Small Brace Panels at the top of the post.

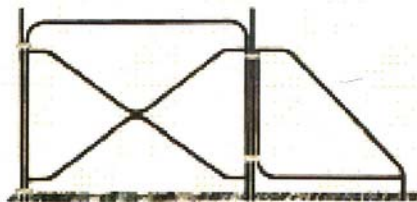

Note: If rocky soil prevents post from fitting tightly against brace panel, bend the T post to the brace panel to fit tight.

5. Drive post #3 and secure Small Brace Panel to it as shown.

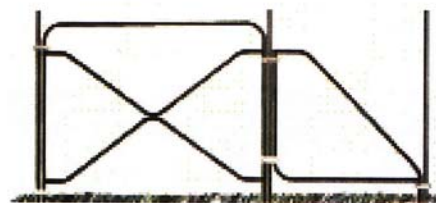

6. On slopes or grades adjust the brace up or down as needed.

